



Description

4 Button control panel with USB offers power recline and power head rest functionality along with two user memory setting for power recline and head rest, along with home button. The buttons on the control are numbered in the figure above and descriptions of each button can be found below.

1 – Head Rest OPEN Button

This button will open the head rest actuator, moving it forward.

2 – Head Rest CLOSE Button

This button closes the head rest actuator, returning the head rest to a closed position.

3 – Power Recline OPEN Button

This button will open the power recline actuator, reclining the seat.

4 – Power Recline CLOSE Button

This button will close the power recline actuator, returning the seat to an upright position.

5 – USB Charging Port.

This port will charge any device with USB capability.

6 – Memory Plus Buttons

Two of these buttons allows you the ability to preset separate seating positions which can be recalled with the push of one button.. To set the memory button position the furniture in the desired seating location and hold down either memory 1 or 2 until you feel a vibration which indicates the button has been set.

7 – “Home” Button

This feature will return the furniture to the fully closed position with the touch of a button