



## Description

Power Button boasts power recline. The buttons on the control are numbered in the figure above and descriptions of each button can be found below.

### **1 – Power Recline OPEN Button**

This button will open the power recline actuator, reclining the seat.

### **2 – Power Recline CLOSE Button**

This button will close the power recline actuator, returning the seat to an upright position.