



Description

4 Button control panel with USB offers power recline and power head rest functionality with the added benefit of a charging port for any device with USB charging capability. The buttons on the control are numbered in the figure above and descriptions of each button can be found below.

1 – Head Rest OPEN Button

This button will open the head rest actuator, moving it forward.

2 – Head Rest CLOSE Button

This button closes the head rest actuator, returning the head res to a closed position.

3 – Power Recline OPEN Button

This button will open the power recline actuator, reclining the seat.

4 – Power Recline CLOSE Button

This button will close the power recline actuator, returning the seat to an upright position.

5 – USB Charging Port.

This port will charge any device with USB capability.

6 – USB Disconnect Button

This button will turn off the power to the USB port.