



Description

Power Plus Button with USB boasts power recline. The buttons on the control are numbered in the figure above and descriptions of each button can be found below.

1 – Power Recline OPEN Button

This button will open the power recline actuator, reclining the seat.

2 – Power Recline CLOSE Button

This button will close the power recline actuator, returning the seat to an upright position.

3 – USB Charging Port

This port will charge any device with USB charging capability.