



Zero Gravity Hand Wand Instructions

- Home: Press and hold to return chair to closed position from any open position.
- Head : Press right arrow to open the head rest, Press the left arrow to close the headrest.
- Footrest: Press right arrow to open the footrest, Press the left arrow to close the footrest.
- Back: Press Left arrow to tilt the chair back, Press the right arrow to return the chair to the upright position.